Mode d'emploi et d'entretien du mini-diffuseur Pond Accent.

Prière de lire toutes ces consignes avant de commencer.

REMARQUE : la pompe est soigneusement inspectée et mise à l'essai pour assurer la sécurité de l'utilisateur et son bon fonctionnement. Cependant, le non-respect des consignes et mises en garde énoncées dans ce manuel peut causer des dommages ou des blessures graves.

FONCTIONNEMENT DE LA POMPE

• NE PAS laisser la pompe fonctionner lorsqu'elle n'est pas dans l'eau. Toujours plonger la pompe dans l'eau d'abord, puis la brancher dans une prise de courant.
• Pour réduire le débit, régler le levier de commande du débit se trouvant sur le côté de la pompe afin de restreindre le débit d'eau.

SÉCURITÉ

• Risque d'électrocution – cette pompe comprend un conducteur de terre et une fiche. Pour réduire le risque d'électrocution, la brancher seulement dans une prise correctement mise à la terre
• Cette pompe n'est conçue que pour un usage avec de l'eau.
• Cette pompe n'est PAS conçue pour un usage dans une piscine ou un cours d'eau.
• NE PAS la brancher à une tension autre que celle indiquée sur la pompe.
• Toujours débrancher la pompe de la prise de courant de la manipuler.
• NE PAS faire fonctionner sans eau.
• Pour un refroidissement adéquat, faire fonctionner la pompe uniquement lorsqu'elle est complètement plongée dans l'eau.

ENTRETIEN ET NETTOYAGE

• L'entretien mensuel peut prolonger la durée de vie de la pompe. Pour nettoyer la pompe, retirer le couvercle avant et la roue. Utiliser une petite brosse ou un jet d'eau pour éliminer les débris.
ATTENTION : l'arbre de la pompe ne peut être retiré. Si la pompe ne fonctionne pas, procéder aux vérifications suivantes :
• Vérifier le disjoncteur et brancher la pompe dans une autre prise de courant pour s'assurer qu'elle est bien sous tension.
• Vérifier le débit et les tuyaux pour s'assurer qu'il n'y a ni pliure, ni obstruction. L'accumulation d'algues peut être évacuée avec un boyau d'arrosage.
• Vérifier l'admission d'eau pour s'assurer qu'elle n'est pas obstruée par des débris.
• Retirer l'amenée pour s'assurer qu'elle n'est pas obstruée par des débris.
Tourner le rotor pour s'assurer qu'il n'est pas brisé ou coincé.
REMARQUE:vérifier que les boucles du cordon électrique se trouvant sous la prise de courant forment une « boucle d'égouttement ». Cela empêchera l'eau de couler le long du cordon et dans la prise de courant.

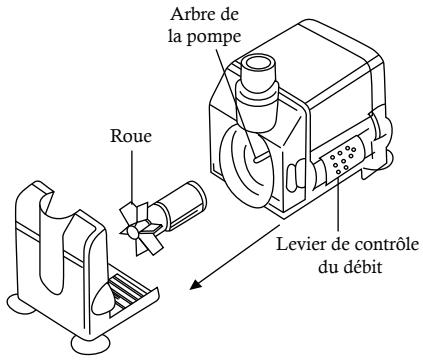

Fabriqué par :
Zhongshan Jebao Electrical Appliances Co. Ltd
Tongmao Industrial Park, Dongsheng
Zhongshan, Guangdong, China
Email: info@jebao.com
Tel: +86-760-2212306, 2212307
Fax: +86-760-2212368
www.jebao.com

Pond Accent Spitter Instructions and Care Manual

Please read through all instructions before starting.

NOTE: Jebao pumps are carefully inspected and tested to ensure both safety and operating performance. However, failure to follow the instructions and warnings in this manual may result in pump damage and or serious injury. Be sure to read and save this manual for future reference.

PUMP OPERATION

• DO NOT let the pump run when not submerged in water. Doing so may damage the pump. Always submerge the pump in water first then plug into an electrical outlet.
• If less flow is desired, adjust the flow control lever on the side of the pump to restirct the discharge flow.

SAFETY

• Risk of electric shock - this pump is supplied with grounding conductor and plug. To reduce risk of electric shock, be certain that it is connected only to a properly grounded receptacle.
• DO NOT remove cord and strain relief. DO NOT connect conduit to pump.
• This pump has been evaluated for use with water only.
• This pump has NOT been investigated for use in swimming pools or marine areas.
• DO NOT connect to any voltage other than that shown on the pump.
• Always disconnect from electrical outlet before handling the pump.
• DO NOT operate without water.
• Operate pump completely submerged for proper cooling.

CARE AND MAINTENANCE

To clean the pump, remove the front cover and the impeller. Use a small brush or stream of water to remove any debris.
CAUTION: The pump shaft cannot be removed. If the pump fails to operate check the following:
• Check circuit breaker and try another outlet to ensure the pump is getting electrical power.
• Check the pump discharge and tubing for kinks and obstructions. Algae build up can be flushed out with a garden hose.
• Check the inlet to ensure it is not clogged with debris.
• Remove the pump inlet to access the impeller area. Turn the rotor to ensure it is not broken or jammed.
• Monthly maintenance will add to your pump's life.
NOTE: Ensure that the electrical cord loops below the electrical outlet to form a "Drip Loop". This will prevent water from running down the cord and into the electrical outlet.

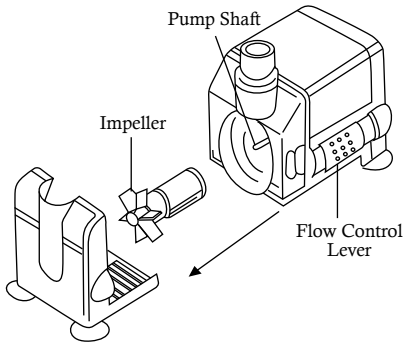

Manufactured By:
Zhongshan Jebao Electrical Appliances Co. Ltd
Tongmao Industrial Park, Dongsheng
Zhongshan, Guangdong, China
Email: info@jebao.com
Tel: +86-760-2212306, 2212307
Fax: +86-760-2212368
www.jebao.com

Pond Accent Spitter Instructions and Care Manual

Please read through all instructions before starting.

PUMP AND SPITTER ASSEMBLY

1. Choose an area on the side of your pond where the pitter can sit level.
2. Remove the smaller adapter from the fountain pump. Please note some force may be required.
3. Replace with the larger adaptor. This is so the tubing will have a snug fit.
4. Place one end of the provided tubing (you may purchase and use kink free tubing, however it is not provided) onto the fountain pump with the newly placed adaptor.
5. Place the other end of the tubing onto the inlet of the spitter.
6. Place the pump into the water and plug the outlet in and enjoy!

CAUTION: Place the pump into the water before plugging it into an electrical outlet.

NOTE: If the spitter doesn't have water coming from the outlet but you can hear the pump working check to makesure there are no kinks in the tubing. You may need to cut the tubing shorter to prevent further kinks.

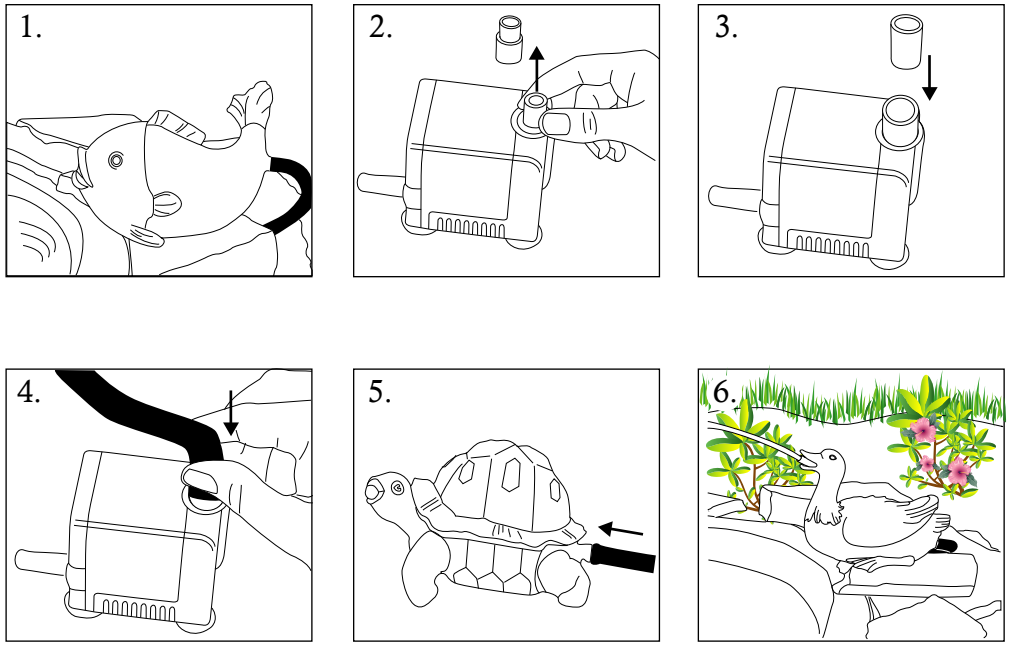

WARRANTY

The Accent Spitters carry a 1 year warranty on the pump from date of purchase, under normal usage. The warranty does not cover the tubing or the resun spitter. The warranty covers manufacturer's defects only. The warranty does NOT cover neglect, tampering, accidental damage or owners misuse. No liability is assumed with respect to loss or damage of livestock or personal property irrespective of cause thereof.

Proof of purchase must be presented to cover any warranties.

Mode d'emploi et d'entretien du mini-diffuseur Pond Accent.

Prière de lire toutes ces consignes avant de commencer.

ASSEMBLAGE DE LA POMPE ET DU MINI-DIFFUSEUR

1. Choisir un endroit situé sur le côté de l'étang où le mini-diffuseur reposera de niveau.
2. Retirer le petit adaptateur de la pompe fontaine. Une certaine force est requise pour cette manœuvre.
3. Remplacer par un adaptateur plus gros afin que le tuyau soit bien serré.
4. Placer une extrémité du tuyau fourni (vous devrez peut-être acheter un tuyau sans pliure, non compris) dans la pompe fontaine avec l'adaptateur qui vient d'être posé.
5. Placer l'autre extrémité du tuyau dans l'admission du mini-diffuseur.
6. Mettre la pompe dans l'eau et la brancher dans la prise de courant.

ATTENTION: la pompe dans l'eau avant de la brancher dans la prise de courant.

REMARQUE: si l'eau ne coule pas, mais que la pompe semble fonctionner adéquatement,

s'assurer que le tuyau n'est pas plié.

Il faut parfois raccourcir le tuyau pour éviter que celui-ci ne s'entortille.

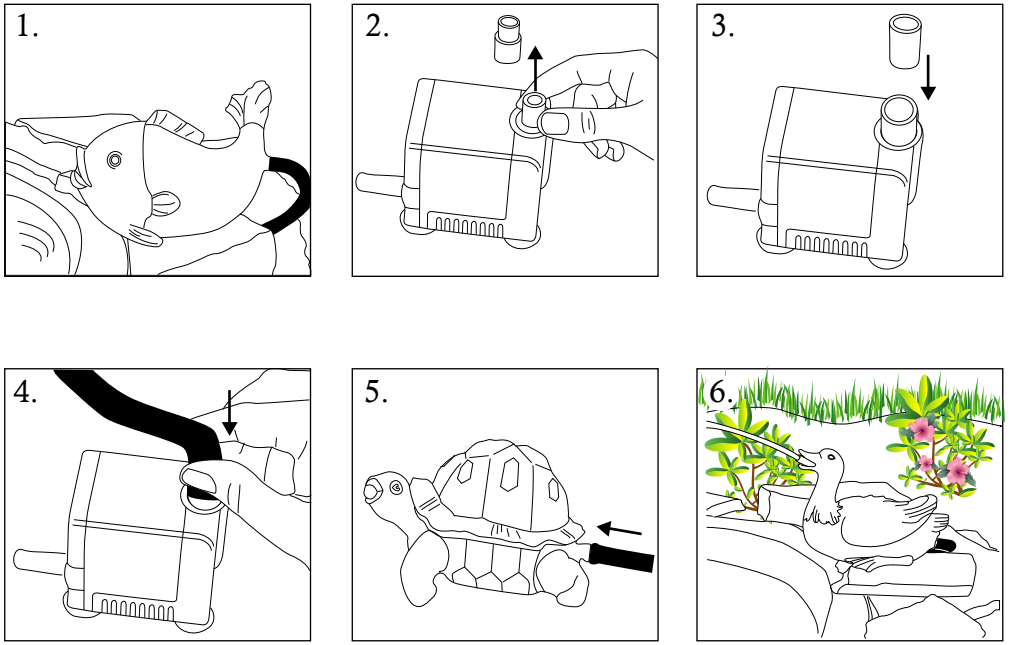

GARANTIE

La pompe est garantie 1 an à partir de la date d'achat, dans des conditions d'usage normales. La garantie ne couvre pas le tuyau ou le mini-diffuseur. La garantie couvre les défauts de fabrication seulement. La garantie NE couvre PAS la négligence, les altérations, les dommages accidentels ou l'usage impropre. Nous n'acceptons aucune responsabilité en cas de perte ou de dommages subis par le bétail ou les biens personnels, sans égard à la cause.

Toute demande de prestation de garantie doit être accompagnée d'une preuve d'achat.